

Please go to [www.quoizel.com](http://www.quoizel.com) for product cleaning tips. Go to the **Care + Maintenance** selection.

**Tools Required:** None.

**Bulb Recommended:** (2) A19 Medium Base Bulbs 75W Maximum, bulbs not included.

**Estimated Assembly Time:** 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase.

### ⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

### ⚠ Care of Tiffany Style Shade

A new tiffany lamp shade has an oil film applied to the shade that protects the tiffany shade from scratches during shipment. If the oil applied is too heavy you can remove the excess oil film with a paper towel. Gently wipe away the excess oil.

For general cleaning of tiffany shades use a gentle lemon oil-based furniture polish applied to a soft cloth and wipe gently.

If a white powder appears on the soldered joints of the tiffany shade this is a normal oxidation process. Use a small amount of lemon oil or mineral oil applied directly to oxidized areas and the soldered area will return to like new.

A. Thread the Socket Assembly, Rods and the Base together. Hand tighten until snug. Pull the cord from the Base as you assemble the parts together to remove the excess cord between parts.


B. Thread the hex nut end of the Nipple with Hex Nut into the hex coupling on the top center of the Socket Assembly. By using the pliers, thread the hex nut against the hex coupling and hand tighten until snug.

C. Place the Spacer Tube and the Check Ring over the top end of the Nipple and secure with the Small Knurled Nut. Hand tighten until snug.


D. Thread the Big Knurled Nut onto the top end of the Nipple and adjust it to proper location for rest components. Place the Flat Washer and the Shade over the top end of the Nipple as shown. Make sure Shade are parallel with Base and secure with the Finial. Hand tighten until snug.

E. Insert bulbs onto sockets and screw snugly into place.


Your fixture is now assembled and ready to use. Enjoy!

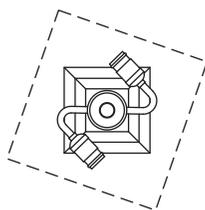


Incorrect base/ socket/ shade Orientation

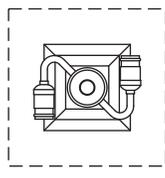

Correct base/ socket/ shade Orientation

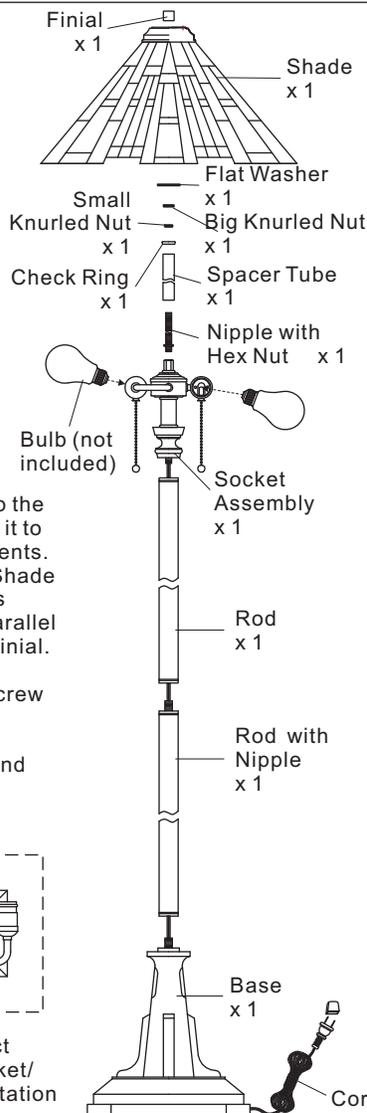

TFMK9362VA  
FINISH: VALIANT BRONZE

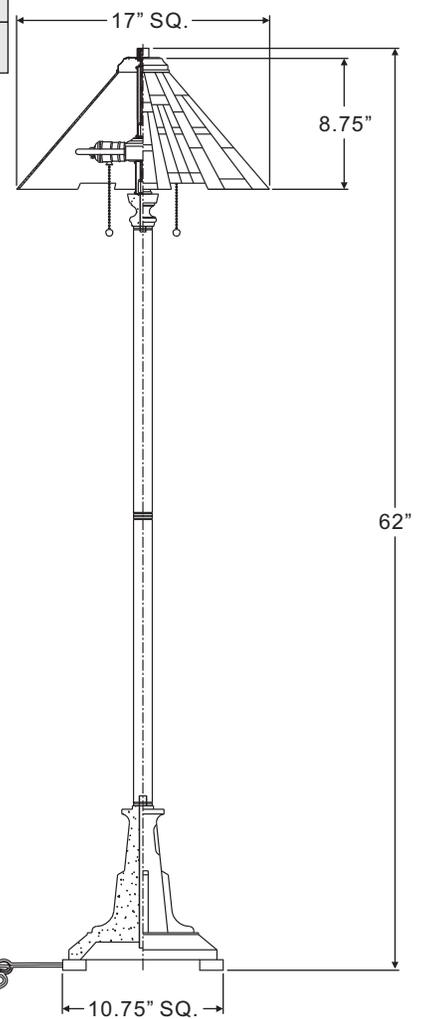

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"