

Please go to www. quoizel. com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (8) A19 Medium Base Bulbs 100W Maximum or
 (8) Medium Base Vintage Bulb T10 bulbs are recommended but not supplied.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

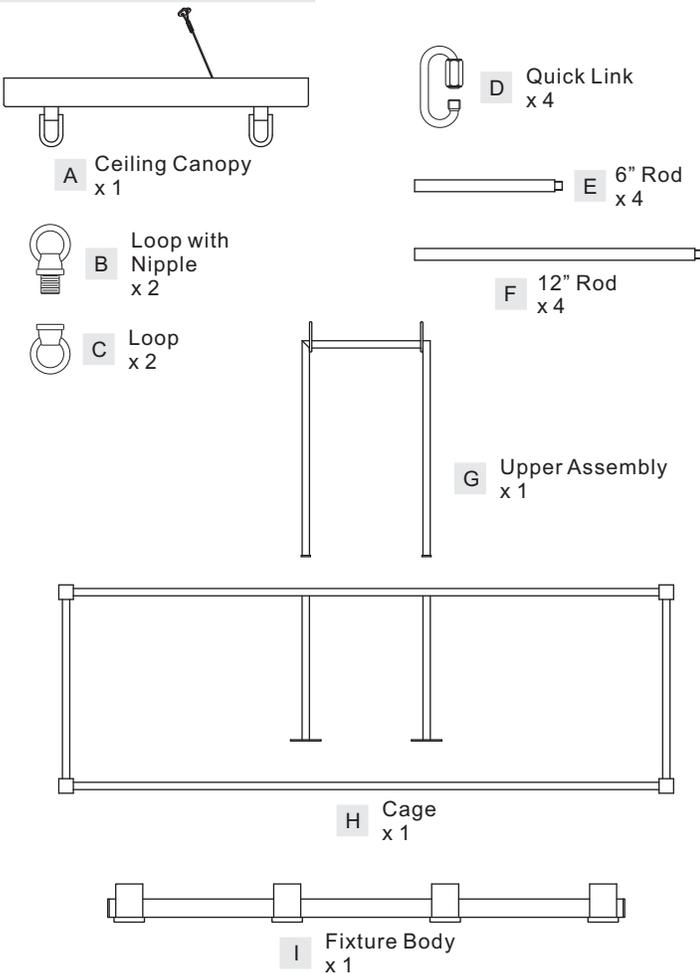

STEP 1 – Install Upper Assembly to Fixture Body

- A. Remove screws from the Fixture Body (I). Attach the Fixture Body (I) to the Cage (H) and attach tabs in the Cage (H) to the Fixture Body (I). Secure by threading previously removed screws onto tabs and Fixture Body (I). Tighten until snug with screwdrivers.
- B. Remove screws from (2) bars on the top of the Fixture Body (H). Attach the tabs at the ends of the Upper Assembly (G) to (2) bars on the top of the Fixture Body (H). Secure them together with the previously removed screws. Hand tighten until snug with screwdrivers.

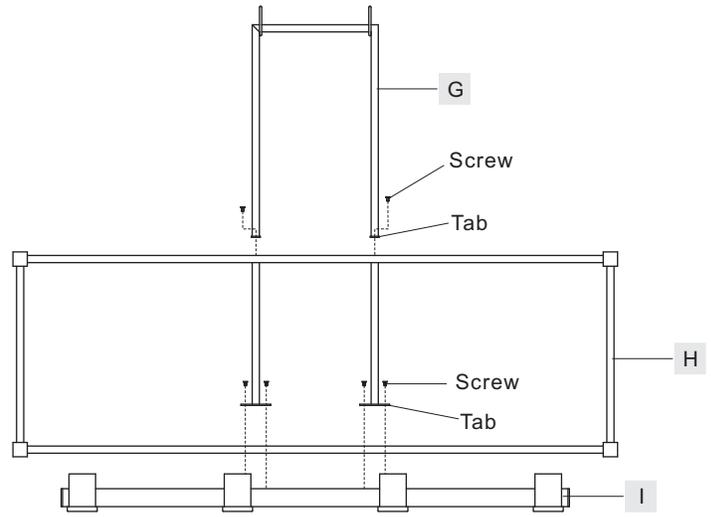



Figure 1

STEP 2 – Install Rods to Upper Assembly

- A. Determine Rods (E/F) to be assembled to Fixture Body (I) according to your hanging height.
- B. Pass the supply wires and ground wire through one Loop (C), the chosen rods (E/F). Thread the Loop (C) and the chosen Rods (E/F) together and Hand tighten until snug.
- C. Connect the Loops (C) at the ends of the chosen Rods (E/F) to loops at the top end of the Upper Assembly (G) with Quick Links (D).

Suggested rods for Ceiling height :
 8' ceiling: use (1) 6" rod

Hardware Contents

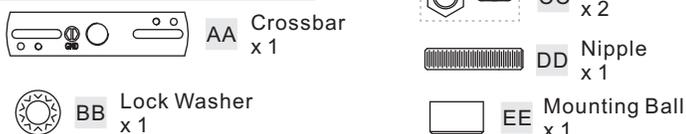

Thank you for purchasing a Quoizel product.
 Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
 or visit us on-line at www. quoizel. com

(Step 2 Continued)

9' ceiling: use (1) 6" rod and (1) 12" rod
 10' ceiling: use (1) 6" rod and (2) 12" rods

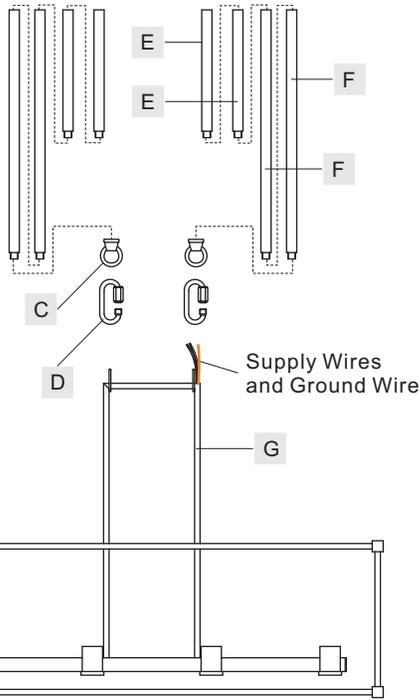


Figure 2

STEP 5 - Install the Ceiling Canopy to Upper Rod

A. Pass the supply wires and ground wire through the Loop with Nipple (B) and the Ceiling Canopy (A). Thread the Loop with Nipple (B) onto the upper rod and hand tighten until snug. Connect the ceiling loop underside of the Ceiling Canopy (A) to the Loop with Nipple (B) with Quick Links (D).

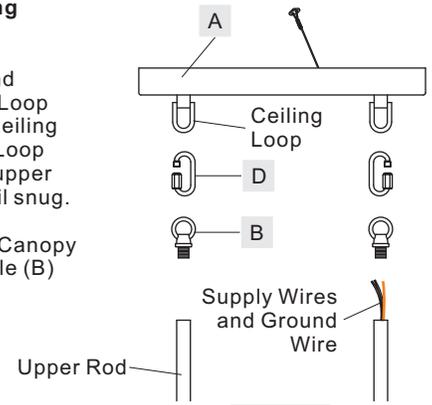


Figure 5

STEP 6 - Attach the Lanyard

A. The purpose of the lanyard is to provide a means to support the fixture hands free from the junction box while connecting the electrical wires.
 B. Turn the Button Stop so it may be inserted into a Crossbar slot. Make sure the Button Stop is completely inside the Crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring, the Lanyard will push into the junction box when the fixture is placed for final mounting.

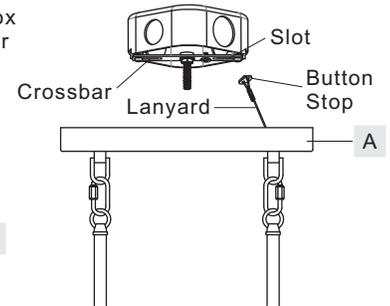


Figure 6

STEP 3 - Install the Crossbar to the junction box

A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included), tighten until snug.

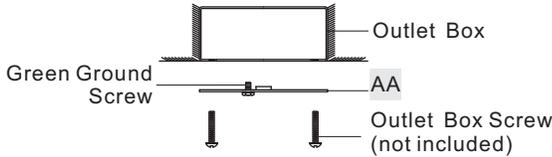


Figure 3

STEP 4 - Install Nipple to Crossbar

A. Thread one Hex Nut (CC) to the middle of the Nipple (DD). Place the Lock Washer (BB) over the Nipple (DD) and then thread the Nipple (DD) into the Crossbar (AA) until the Nipple (DD) is about 0.375" above the Crossbar (AA).
 B. Place the Ceiling Canopy (A) over the Nipple (DD) against the ceiling to determine the correct position of the Nipple (DD). Thread the Mounting Ball (EE) onto the Nipple (DD). Adjust the Nipple (DD) to allow the Ceiling Canopy (A) to rest against the ceiling when held in place by the Mounting Ball (EE).
 C. Remove the Mounting Ball (EE) and the Ceiling Canopy (A) and then tighten the Hex Nut (CC) against the Crossbar (AA) to secure in place.

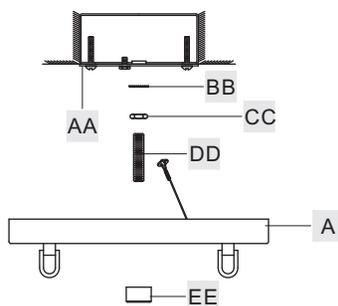


Figure 4

STEP 7 - Making the Wire Connections

A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
 B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.

Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed.

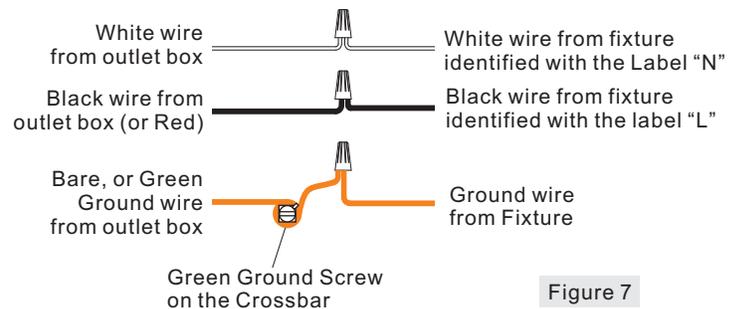


Figure 7

Thank you for purchasing a Quoizel product.
 Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
 or visit us on-line at www.quoise.com

STEP 8 - Install Ceiling Canopy to Crossbar

- A. Attach the Ceiling Canopy (A) over the end of the Nipple (DD) and secure with the Hex Nut (CC). Hand tighten until snug.
- B. Thread the Mounting Ball (EE) onto the Nipple (DD) and hand tighten until snug.

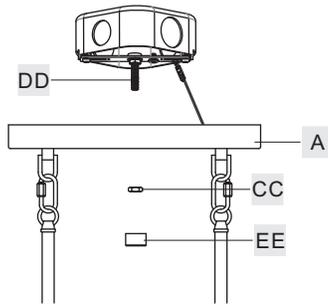


Figure 8

STEP 9 - Install Bulbs

- A. Insert bulbs onto sockets and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

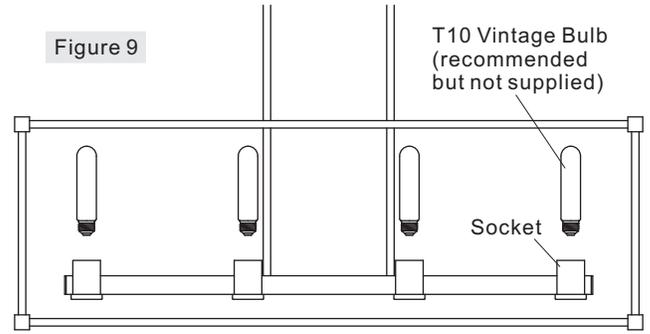


Figure 9




T10 Vintage Bulb (recommended but not supplied)

Socket

BYR840EK

FINISH: EARTH BLACK

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

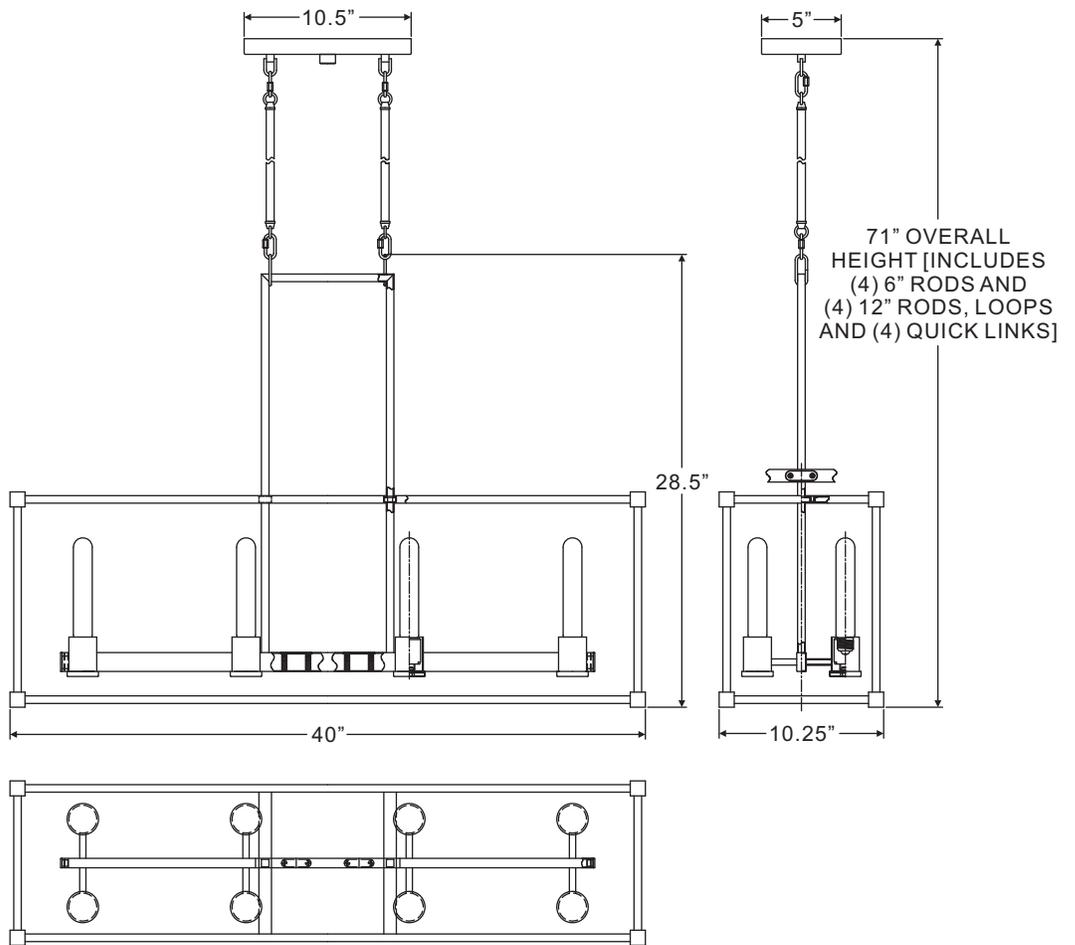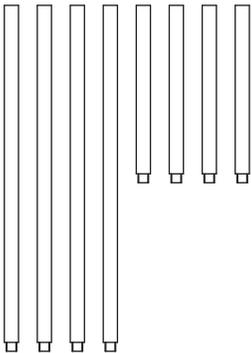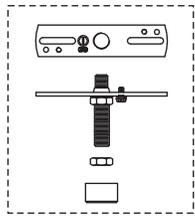

71" OVERALL HEIGHT [INCLUDES (4) 6" RODS AND (4) 12" RODS, LOOPS AND (4) QUICK LINKS]

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoise.com